

Nook

WILBOR Guides


Updated 4/8/2013



This Guide is for nooks other than the Color or Tablet; for these, see the WILBOR Guide: "Nook Color/Nook Tablet Using OMC App."

1. Visit the WILBOR website at <http://wilbor.lib.overdrive.com>; browse or search for an eBook.

2. Click on a title with a black book icon in the top right corner. Be sure there is an ePUB version of the book.

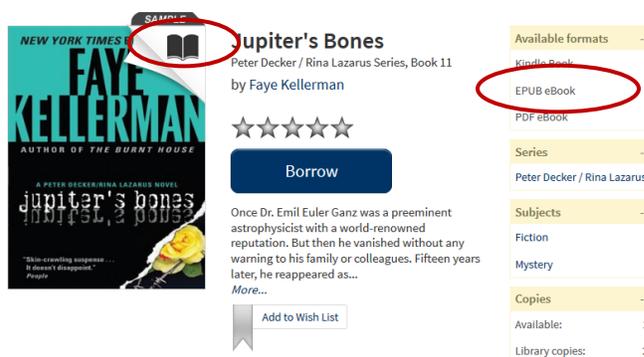

3. Click on "Borrow."





4. Pull down the menu to "Select one format," and click on the box next to "EPUB eBook."

5. Click on "Confirm and Download."

Adobe Digital Editions will automatically open, or Windows will ask if you want to open in Adobe Digital Editions. (Click on OK to open in ADE.)


(If you have not yet installed and authorized Adobe Digital Editions on your computer, see WILBOR Guide, "Adobe Digital Editions.")

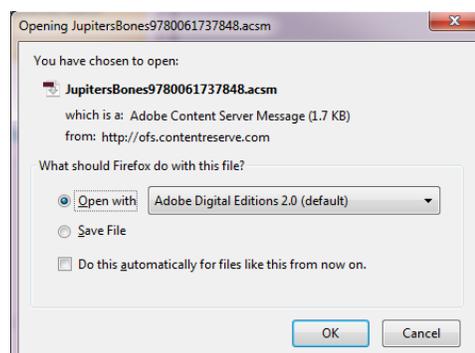

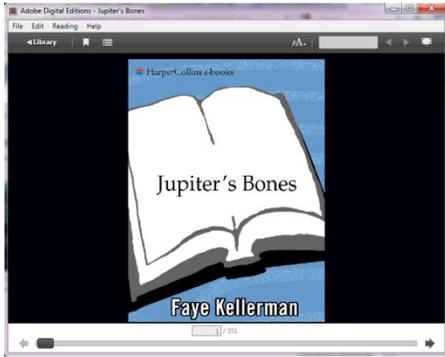


The book will download into the “Read” view.

To transfer the ebook to your ereader device:

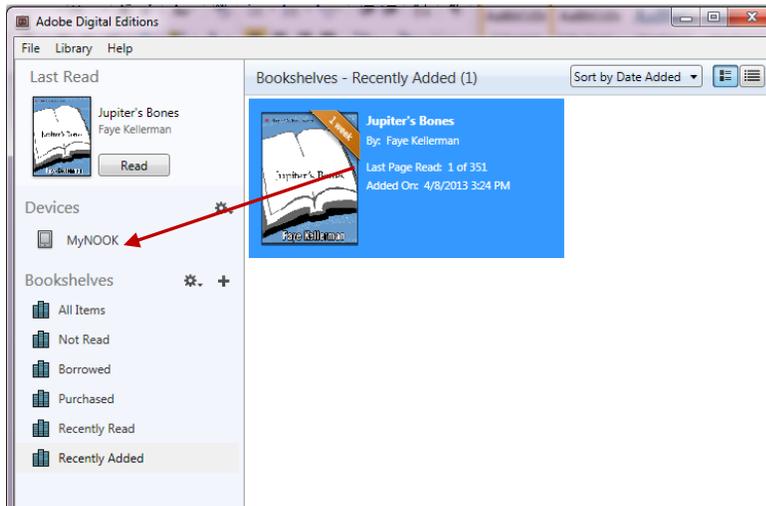

1. Connect your device;
2. Make sure you are in the “Library” view in Adobe Digital Editions;
3. Click and hold the mouse button on the book’s cover, and drag on top device’s icon in the Bookshelves in Adobe Digital Editions.

Or, in the list view of the bookshelf, click and drag from the title to the nook icon.

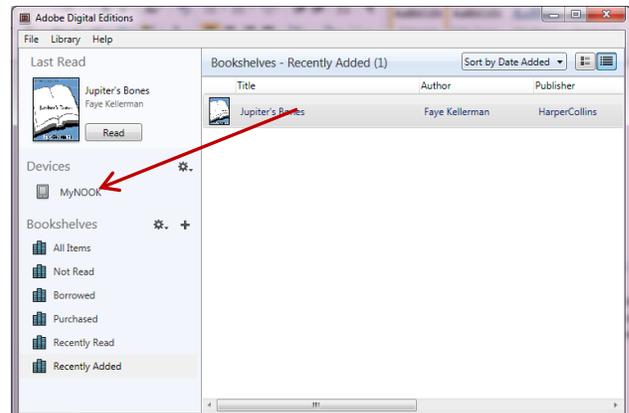




These might come up:

When I plug my ereader into the computer's USB port, the device doesn't appear in Adobe Digital Editions.

Your computer/Adobe Digital Editions and your ereader device must be authorized with the same Adobe ID.

To authorize the computer, with Adobe Digital Editions open pull down the "Help" menu and select "Authorize computer," or press the key combination: Ctrl+Shift+U

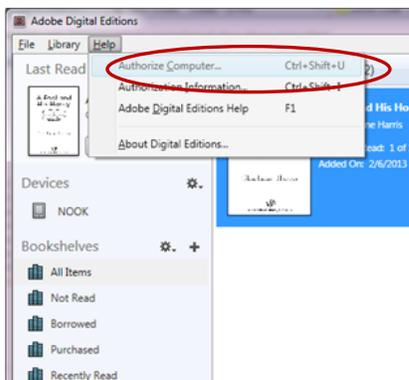

If the computer is authorized, but not with correct Adobe ID, deauthorize the computer first:



1. Open Adobe Digital Editions
2. On a PC press: Ctrl+Shift+D (press all 3 keys at the same time); On a Mac: Cmd+Shift+D)
3. Deauthorize screen will open, and warn you that protected items in your library may no longer be readable
3. Select Deauthorize, then Click on Quit
4. Authorize computer as described above.

The device & ADE are both authorized with the same Adobe ID, but I still can't see the device.

Try disconnecting the device, and closing Adobe Digital Editions. Connect the device again, then open Adobe Digital Editions. Sometimes the order in which you do things matters!